

Panasonic MX-20 Chroma Key Instructions

1. Choose camera on bottom source.
2. Choose background on top source.
3. Press chroma Key button.
4. Press set button.
5. Use position joystick to adjust blue/green area.
6. Press enter button.
7. Repeat step 5 and 6 until the blue or green haze has disappeared.
8. Hit set button.