


## Refreshing your A/V devices

When using Final Cut Pro and suddenly your DV deck or walkman will not log and capture or the clips on your timeline will not play out to the school, do the following.

At the top of your FCP screen, select *VIEW > REFRESH A/V DEVICES*  
(example)

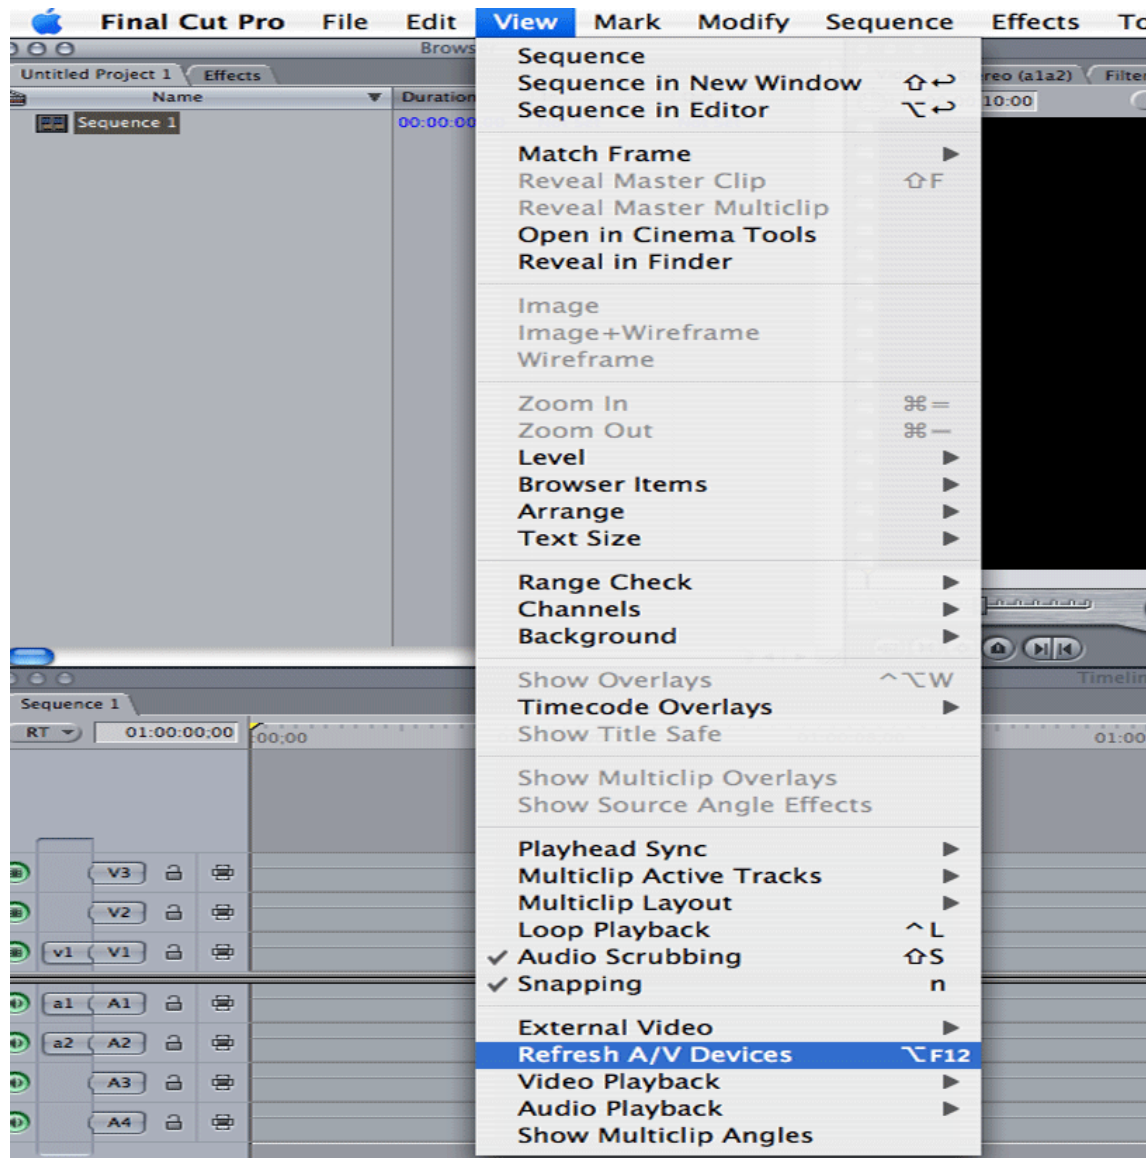

-This will tell the computer to go out & look for a new device (DV deck, walkman or camera).

-If the computer still will not recognize your device, check your [external video](#) settings.